



Updated On 20th of Jun 2005 by Mia Lee





This is useful information in case of your relook 300S does not respond to the Remote Control Unit. This is also good to know when you want to download the latest Image from PC to relook 300S.



1.To turn your relook into USB download Mode

While pressing and holding  the power button, about 1 second later press  the up direction button. “USB” will appear on the display of front panel.

2. To turn your relook into Serial Download Mode




While pressing and holding the  power button, about 1 second later press the  right direction button. “SERIAL” will appear on the display of front panel.


3. Forced Power Off

Press both of the  Power button and the  OK button at same time.





Caution) Try to not to use this method. It will have same effect on relook 300S when A/C power unplugged unexpectedly.

4. Turn your relook into Shell Mode

While pressing and keep holding the  power button, about 1 second later press and hold the  left direction button. As soon as you press and hold the  left direction

button, release the  power button immediately. “SHELL “will appear on the display of front panel.

5. Forced HDD Format

While pressing and holding the  power button, about 1 second later press and hold the  down direction button. As soon s you press and hold the  down direction button, release the  power button immediately. “HDD FORMAT” will appear on the display of front panel.