

How to set up the driver for J-tag

- 1st. Connect your computer with J-tag .
- 2nd. Put the file which “ **Ali_usb_driver.rar** ” on desktop, or other place, and pls keep this location in mind.
- 3th. Click “ my computer ” on desktop, and then click the right key of the mouse.
- 4th. Click “Properties” and choose the item “hardware” under “System Properties”, and then go to click “Device manager” and choose “Universal Serial Bus Controllers” under the item “Other devices”, then you will find a yellow “?” or “!” under “Universal Serial Bus Controllers”.
- 5th. Choose the yellow “?” or “!”, and click the right key of the mouse, and choose the item “Update driver” to set up the driver.
- 6th. Pls choose the item “Install from a list or specific location (Advanced)”, and click “Next”.
- 7th. Choose the item “Include this location in the search”, pls find the file “ **Ali_usb_driver.rar** ” you saved in the 1st step.
- 8th. Click “Next” and finish the following setting according to the advice by computer.